7. Shoot and playback

1) Capture: Switch the record mode to the capture mode, and press the shutter key to capture;
2) Video recording: Switch the record mode to the video recording mode, press the shutter key to start to carry out video recording, and then press the shutter key once more to stop video recording.
3) Audio recording: Switch the record mode to the audio recording mode, press the shutter key to start to carry out audio recording, and then press the shutter key once more to stop audio recording;
4) Playback: In the playback mode, select the video,photo , audio recording,MP3 or E-book mode, and then select a file to play.

8. Connecting to a computer

1) In the setting menu, set the USB mode as MSDC;
2) Plug the USB cable into the video camera USB port;
3) Connect the other end of the USB cable to a computer. At the moment, the computer displays a new driver letter, and you can copy media files in the video camera to the computer;
4) Never plug in or pull out the USB cable during the transmission of files.

Packing List

S/N	Description	Qty
1	Digital Camcorder	1
2	USB Cable	1
3	AV-Cable	1
4	Rapid Guide	1
5	Driver CD	1
6	Carry Strap	1
7	Camera Pouch	1

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

gfm

Quick Start Operating Guideline

DD717
Digital Camcorder

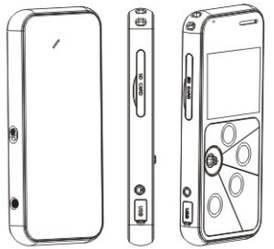

Rapid Guide

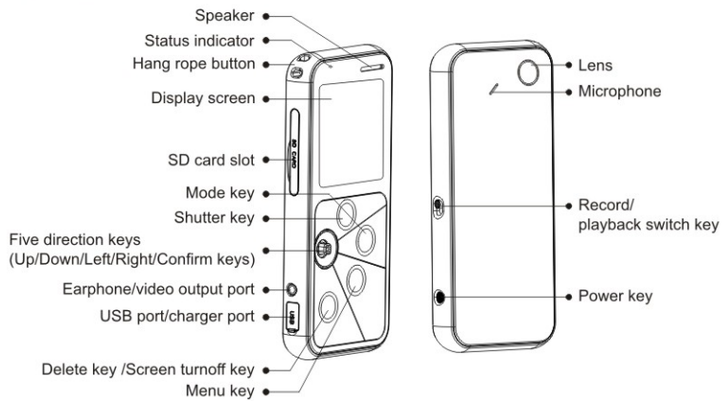

1. Installing the SD Card

1) Verify that the power supply is turned off first.
2) Open the SD card cover.
3) Insert the SD card with its unfilled corner inwards till a snap sound is heard.
4) Close the SD card cover.

2. Taking out the SD card

1) Verify that the power supply is turned off first.
2) Open the SD card cover.
3) Push the SD card inwards, and it will automatically bounce out.
4) Close the SD card cover.

3. Charging the battery

1) Check that the machine is turned off.
2) Connect the machine to the PC with the USB cable attached.
3) Insert the other end of the USB cable into the USB port of this machine to charge. At the moment, the charge indicator is red, and the charging process begins.
4) Wait till the status indicator is off, which indicates the battery has been charged. The charging process requires approximately 3 hours in most cases.
5) This machine does not support charge during its startup.

4. Turning on and turn off the video camera

1) Turnon: Press the Power key at OFF status, and the system will start up automatically and the turnon finishes;
2) Turnoff: Press the Power key at On status, and the system will shut off automatically and the turnoff finishes.

5. Using the LCD

1) Press the Power key to turn on the machine, and the LCD will automatically light up;
2) In the capture, video recording, audio recording modes and MP3 play, press 【Screen Turnoff】key to turn on and turn off the screen.

6. Selecting a operation mode

1) Pull the Record/playback switch key to carry out switchover between the record mode and the playback mode;
2) In the record or playback mode, press the mode key to switch over operation modes in turn:

Record mode:
video recording → capture → audio recording → video recording

Playback mode:
video → photo → audio recording → MP3 → E-book → video